


Wiring adaptor for electrical  
appendices  
KRP1BA58

# Installation Manual

 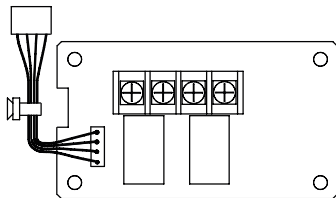







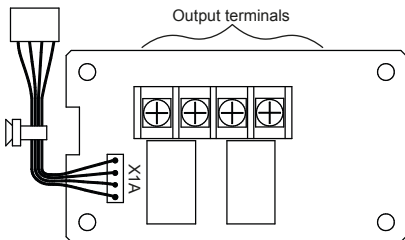
Be sure to read this manual before installation and follow the instruction.

## Accessories

Check if the following accessories are included:


Name	Adaptor	PCB Support	Clamp	Installation manual
Shape				
Quantity	1x	4x	3x	1x

## Names of parts



# Electric wiring

- Refer to the wiring diagram attached to the indoor unit before attempting to wire.
- Make sure wires to units do not pass over the PC board when wiring.
- Wire the adaptor to the indoor unit as described below.

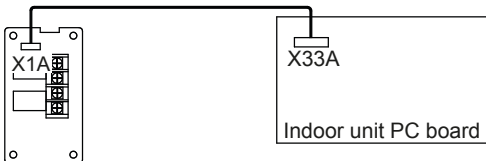


## Receiving the operation display signal

### Attaching an hour meter

Output is generated at the contact while the compressor is running.


Example: Carrying capacity 20mA and above or 1.2A and below

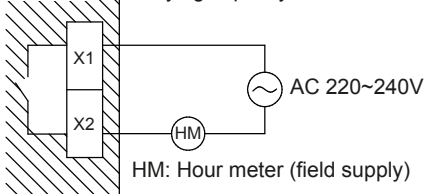

### Fan ON display

Output is generated at the contact while the fan is running.

Example: Carrying capacity 20mA and above or 1.2A and below

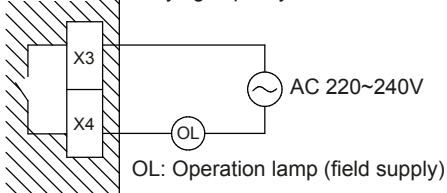



# Installation


- Do not bundle low and high voltage wires together.
- Bundle any excess wires with the attached tie wraps to keep loose wirings off the indoor unit PC board.

## Ceiling-mounted cassette type

**Note:** Installation box for adaptor PCB is required to install the adaptor.

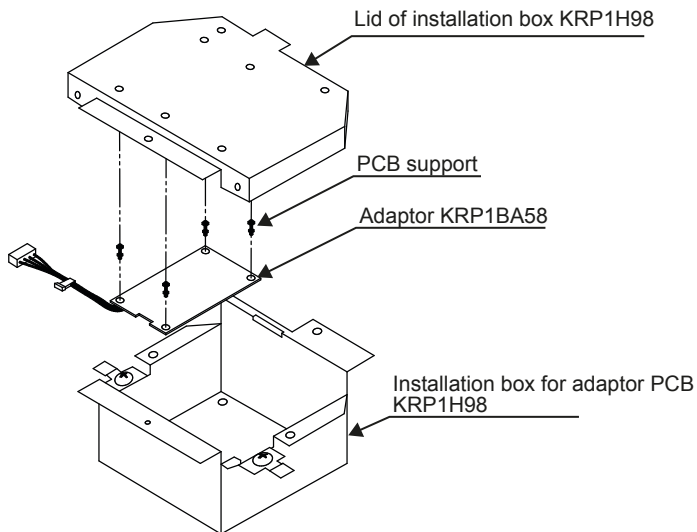

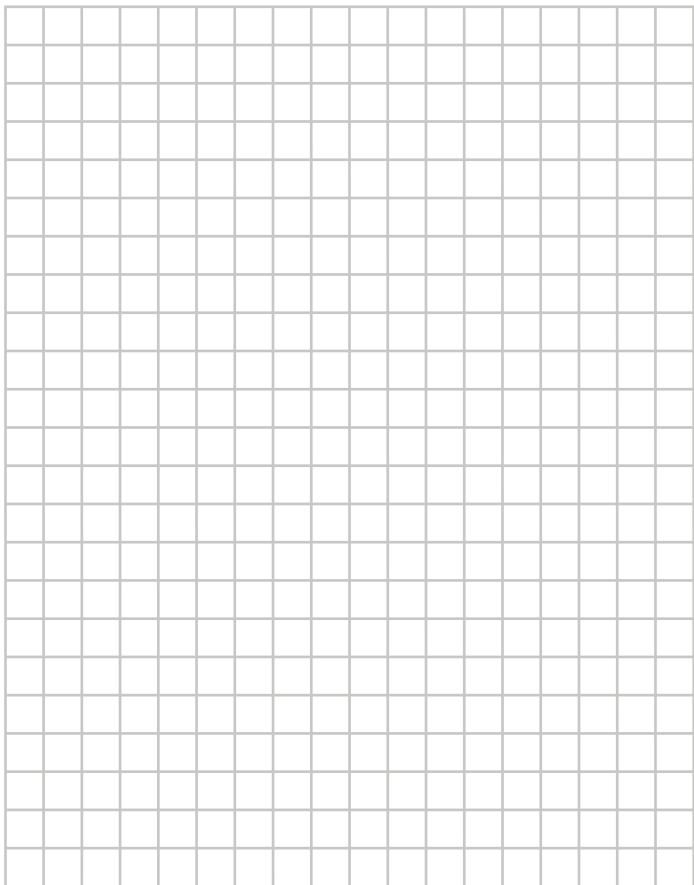

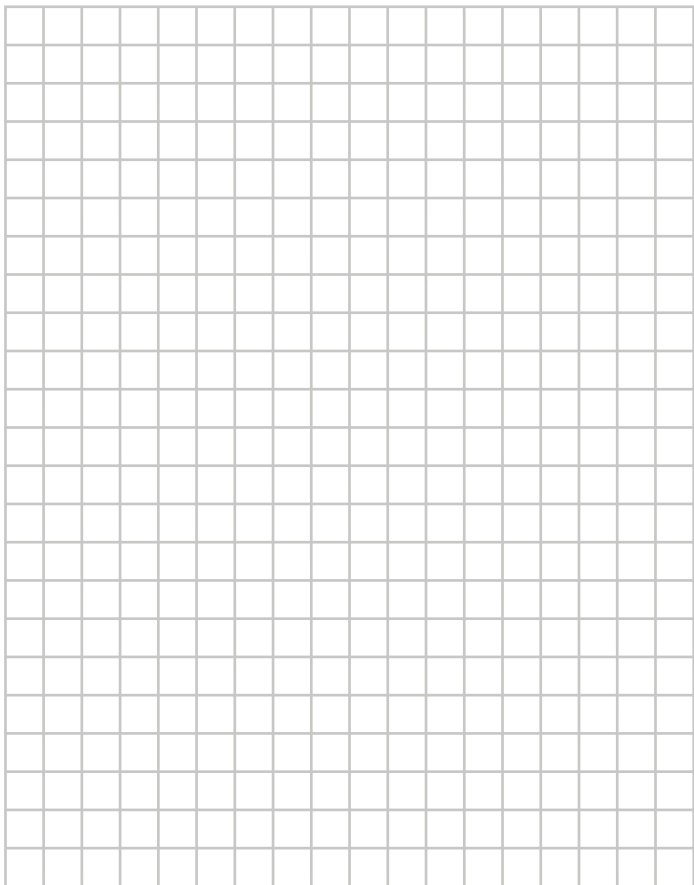

**DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.**

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium