

DAIKIN OPTIONAL PARTS BKS028A4 INSTALLATION MANUAL




Two-dimensional bar code is a code for manufacturing.

Accessories

Ⓐ Floor anchor	2	Ⓓ Reinforce plate	1	Ⓒ Cover	1	Ⓚ Washer (M6)	12
Ⓑ Side support (R)	1	Ⓔ Support plate	2	Ⓗ Thermal insulation	1	Ⓛ Spring washer (M6)	6
Ⓒ Side support (L)	1	Ⓕ Support cover	1	Ⓜ Bolt (M6 × 16L)	6	Ⓝ Nut (M6)	6
				Ⓝ Screw (M4 × 8L)			25


Limitations on Place of Installation

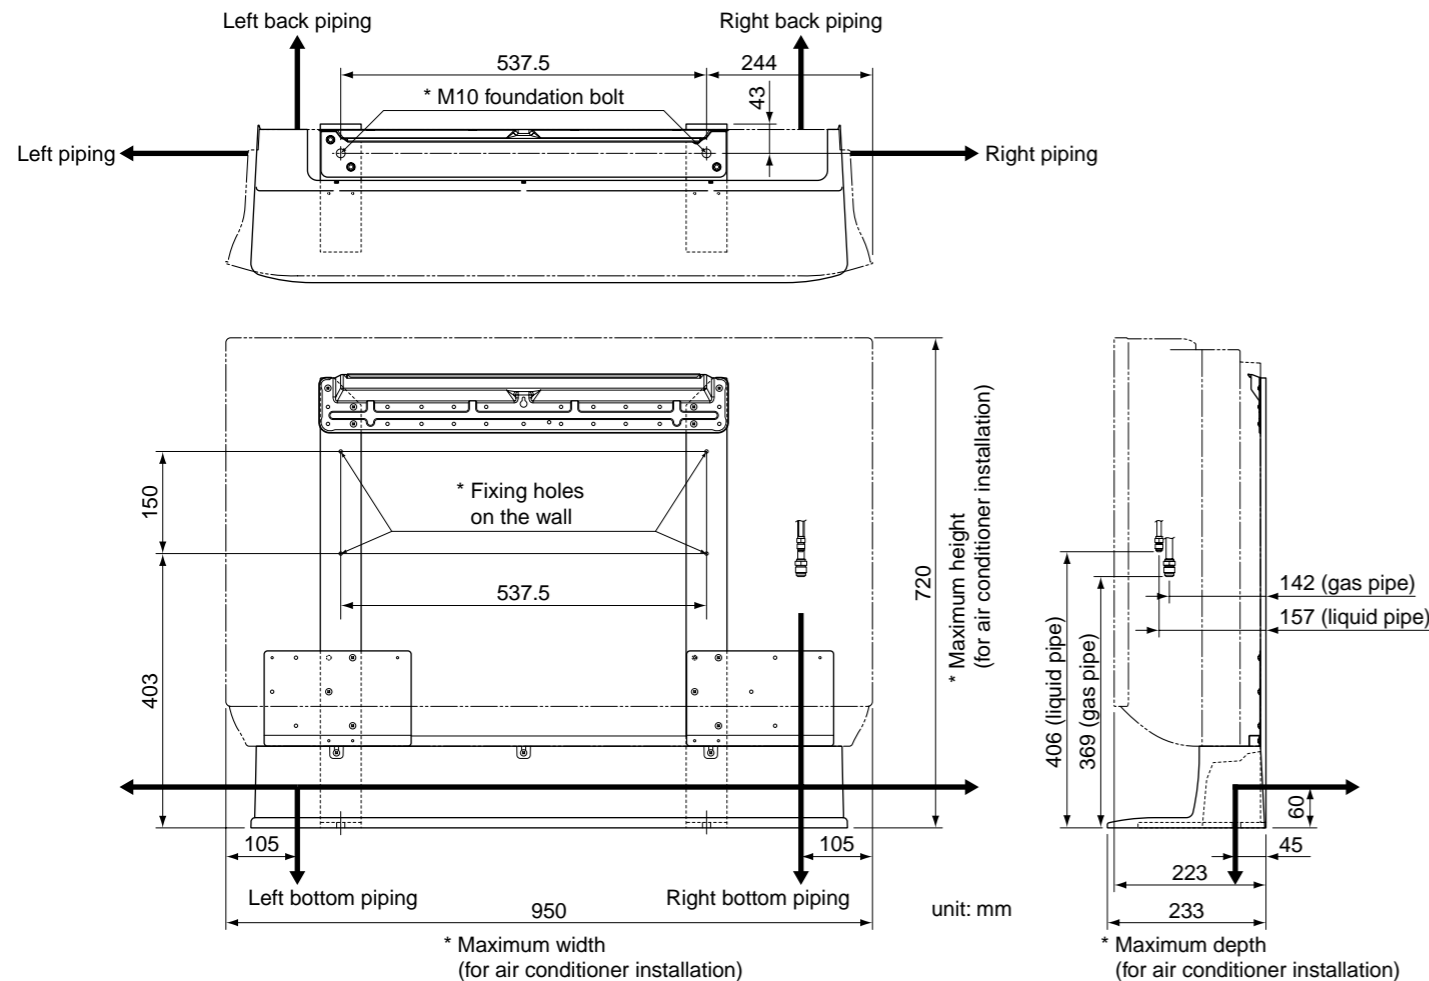

Installation Procedure

1. Assembling the installation frame.

- 1) Fix the Ⓐ floor anchor, Ⓑ side support (R), Ⓒ side support (L), and Ⓓ reinforce plate at the 6 locations using the parts shown below.
(Ⓜ Bolt (M6 × 16L), Ⓚ Washer (M6), Ⓛ Spring washer (M6), Ⓝ Nut (M6))

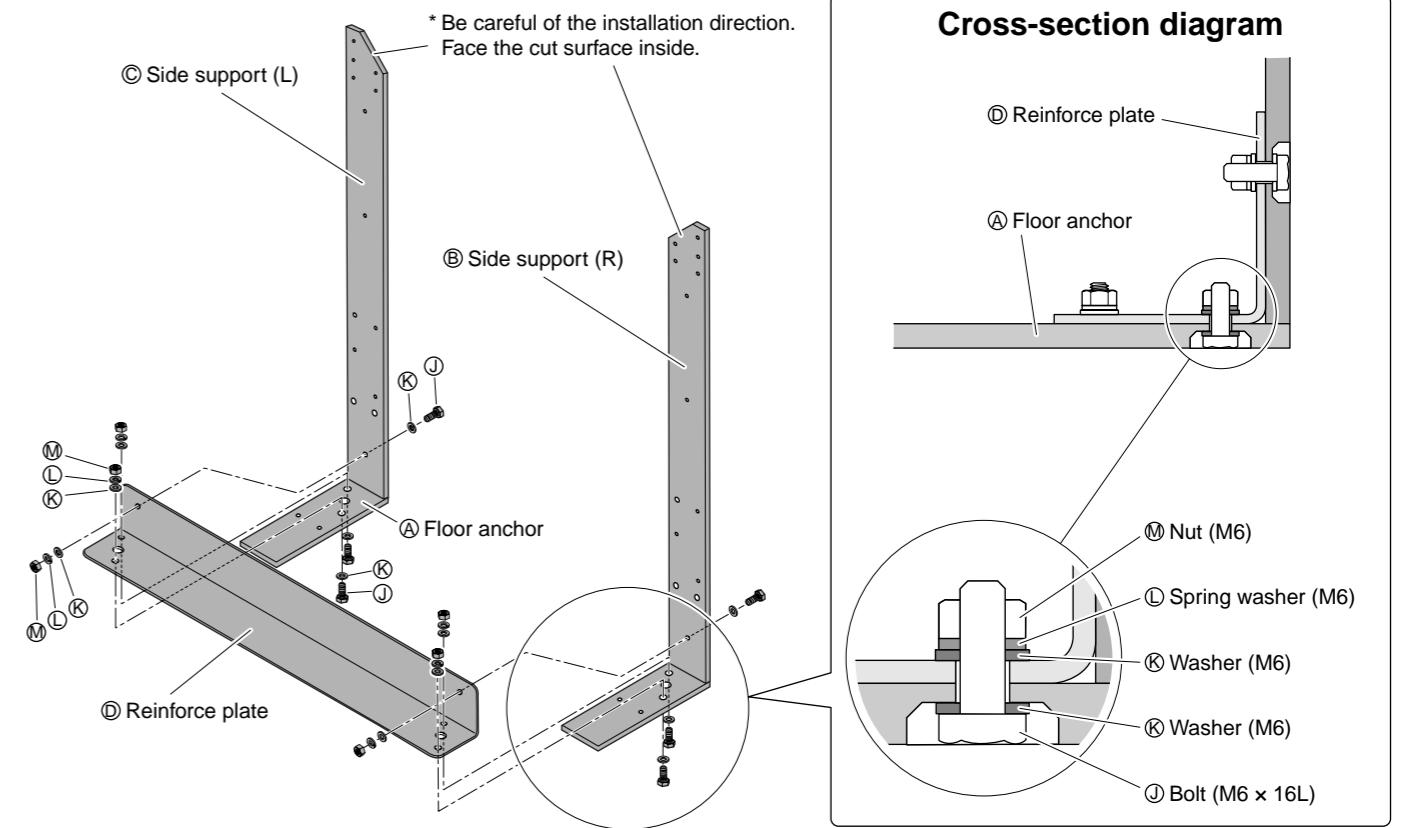


2. Fix the installation frame.

- 2-1) Fix the installation frame at 2 locations on the floor surface using the M10 foundation bolts. (field supply: M10 foundation bolt)
- 2-2) Fix the installation frame at 4 locations on the wall using screws. (field supply: M4 × 25L)


CAUTION

- Be sure to fix the installation frame on the floor surface firmly using M10 foundation bolts.
- Fix the installation frame to a sufficiently strong wall that can bear the heavy load of the unit.

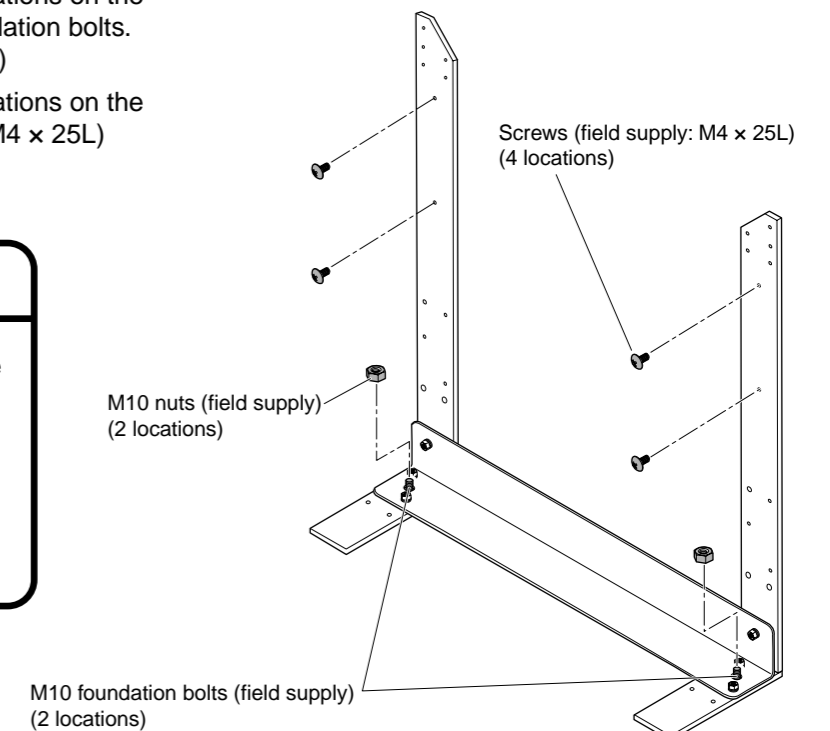


3. Preparing for the air conditioner installation.

- 3-1) Remove the pipe port cover on the bottom right of the air conditioner.
- 3-2) Set the ⊕ thermal insulation, and cover the field piping, drain hose, and inter-unit wiring with it.
(Note: The ⊕ thermal insulation is used only when it is routed under the ⊕ support cover.)
- 3-3) Fix the ⊕ support cover at 8 locations on the installation frame using screws. (Ⓝ Screw (M4 × 8L))

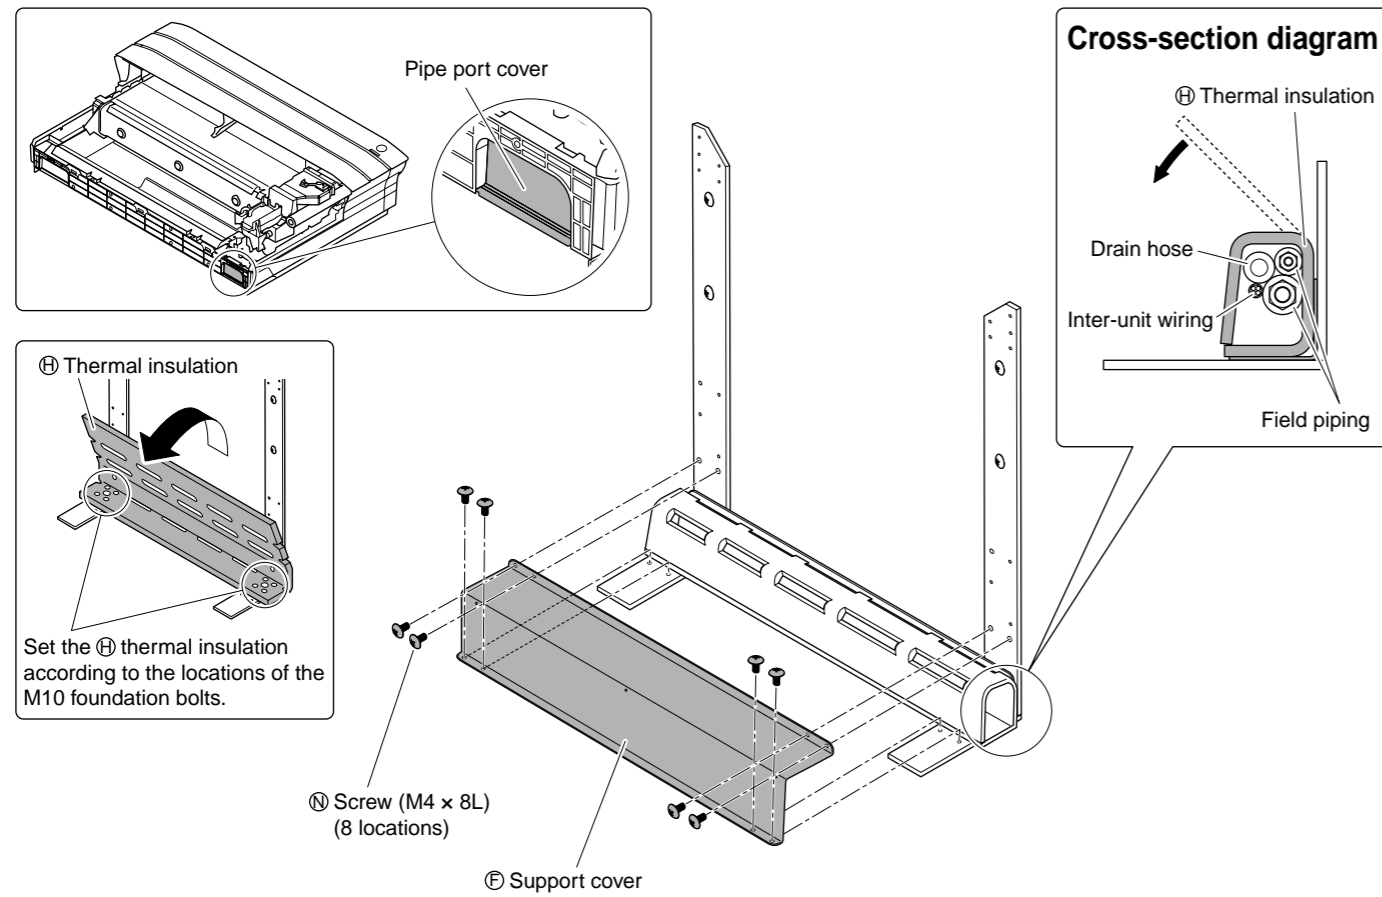


- 3-4) Fix the ⊕ support plate (2 pcs.) at 6 locations on the installation frame using screws. (Ⓝ Screw (M4 × 8L))
- 3-5) Fix the mounting plate (supplied with the air conditioner) at 6 locations on the installation frame using screws. (Ⓝ Screw (M4 × 8L))

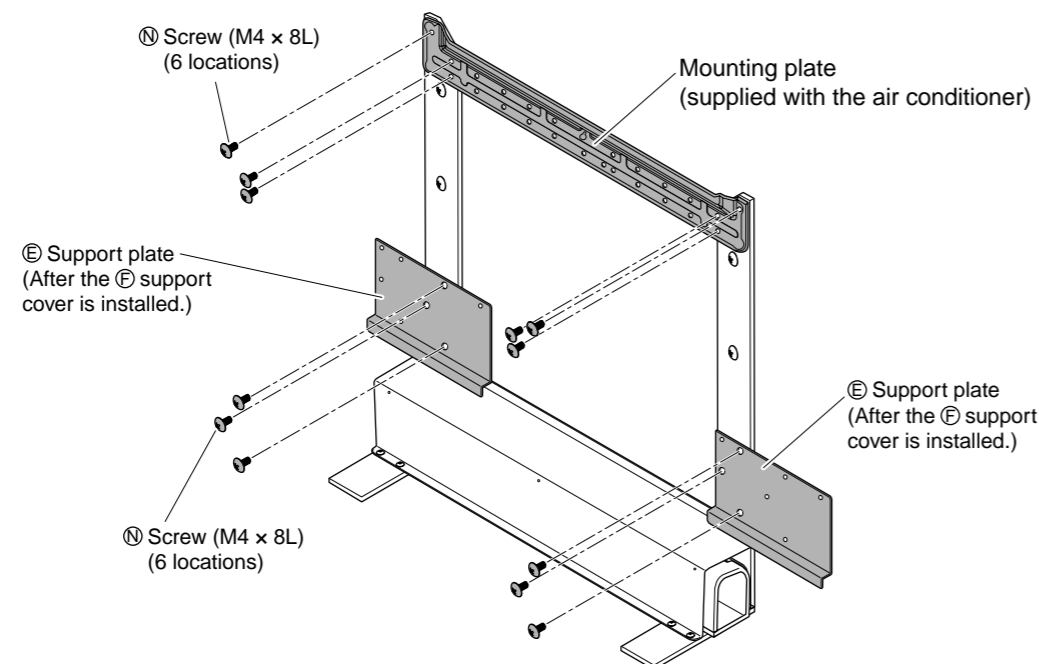

4. Installing the air conditioner and performing finishing.

- 4-1) Hook the air conditioner on the mounting plate (supplied with the air conditioner), and fix it at 2 locations on the installation frame using screws. (Ⓝ Screw (M4 × 8L))

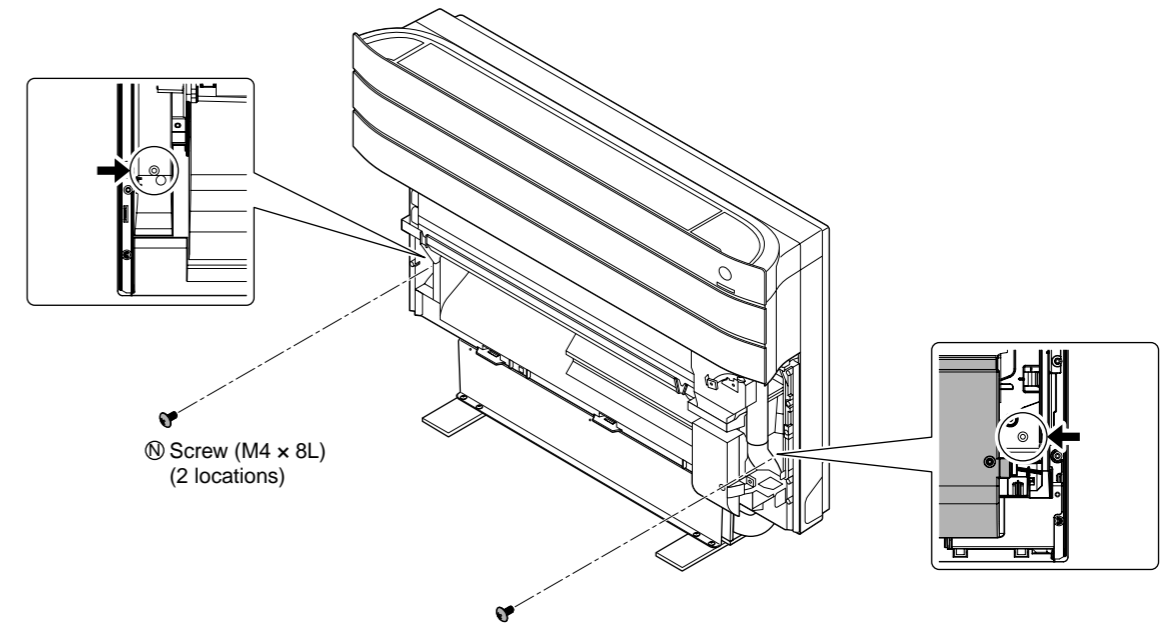

- 4-2) After connecting the field piping, drain hose, and inter-unit wiring, fix the ⊕ cover at 3 locations on the installation frame using screws. (Ⓝ Screw (M4 × 8L))

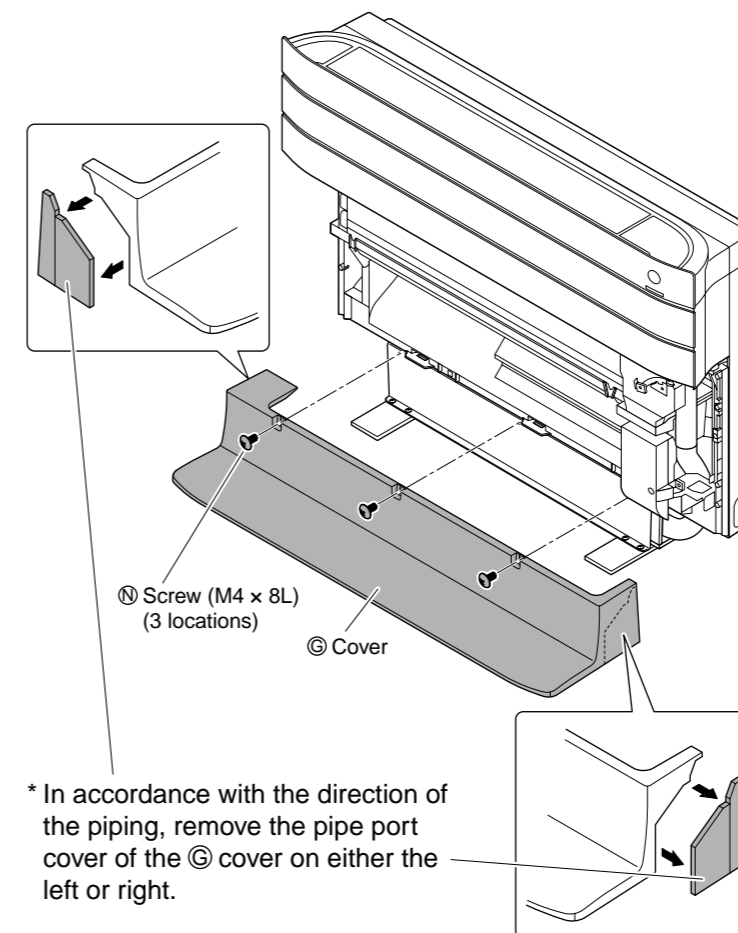


Diagram of finished unit

